

SECURE-T INSTALLATION FOR STANDARD WOOD FRAMES




555-11 (1)




555-3 (3)



F1210 (2)

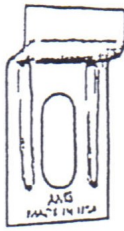

555-31 (2)



555-6 (3)



F1303 (6)

